

## **Epson TM Series Receipt Printer USB Interface Driver Installation**

To use an Epson TM series receipt printer with Micro Register a driver must be installed on your computer and this driver must be selected in the company setup of Micro Register.

### **Driver Installation**

To install the driver, download and save the **Epson TM Series Drivers.exe** application program to a folder of your choice and run the application.

Select the computer operating system you will be using. Depending on the model of your printer, select the TM-T88IV Receipt or the Epson TM-U220 Receipt. Click on the Printer Port Setting and select USB and click finish.

### **Cash Drawer**

If a cash drawer is going to be connected to the printer you will need to select this option in the properties of the printer driver. From the control panel in the printer's collection right click on the Epson TM driver icon and select properties. Click Printing Preferences, operation tab, start of document and choose open drawer 1. Click Ok, apply and exit.

Also in the company setup of Micro Register under the hardware configuration tab, uncheck cash drawer installed. This command is not needed as the printer driver will open the drawer

In the company setup of Micro Register [F9] under the hardware configuration tab and invoice options, select the 40 column receipt and the correct printer for your receipts.